

0-25% manual outside air damper Cabinet Unit Heater



Features


Models RF and RS only

- Operational at 0% or 25% outside air
- Furnished with a 120V/60/1 synchronous motor that is wired to the blower to automatically open the damper when the fan starts
- When the power is off or interrupted, the damper returns to the closed position
- Located in bottom of floor mounted units only
- Damper motor always on right side when viewing unit from front side
- All listed dimensions are approximate and are subject to change without notice
- Modifications to the product specifications must be accepted by Zehnder Rittling at its base office


Unit size	A	B	C
02	29	11-5/8	15
03	35	14-5/8	15
04	41	17-5/8	23-5/8
06	53	23-5/8	23-5/8
08	59	26-5/8	33-5/8
10	67	30-5/8	33-5/8
12	77	35-5/8	33-5/8

Specifications

- 20-gauge galvanized steel
- Foam gasket seal
- Galvanized steel damper handle with wing nut memory setting

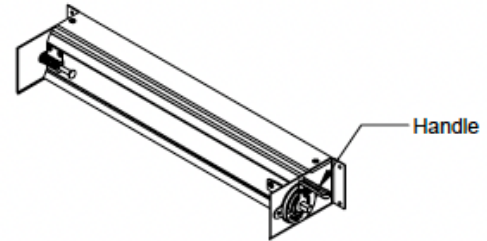

Manual damper

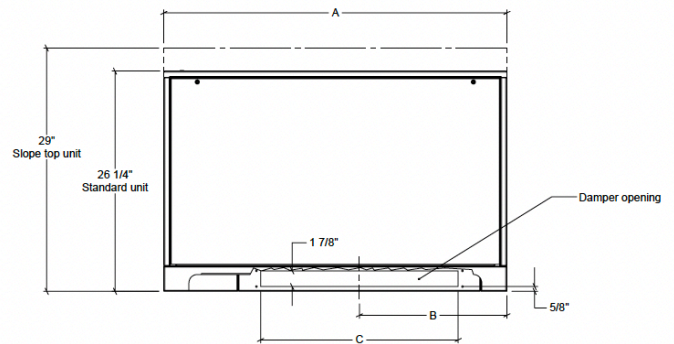

Front View
(left hand unit shown, right hand unit opposite of shown)

